

Chute Faults

Any Chute with firmware 2.9.4 and greater provides fault feedback and deactivates the manual buttons and auto closes the chute to 0%. The remote will continue to work as normal.

Fault 1 – Open & Close Buttons are activated together for 4 seconds

Fault 2 – Open Button (input 2 & 4) stay on for 4 seconds past its open limit

Fault 3 – Only Button Input 2 stays on for 4 seconds past its open limit


Fault 4 – Only Button Input 4 stays on for 4 seconds past its open limit

The chute provides feedback by:

- Changing the flashing of the led light on the chute
 - o The flashing will be pause then flash 1 to 4 number of times and pause. This indicates the fault number
- To the remote with firmware 2.2.43 and greater
 - o The faulty chute will have the title 'CHUTE 3' highlighted red



- o Go under Edit Unit, highlight Set Limits and press the MID button to see which fault is active and how many times it has happened. Key Fault is the active fault - 2, 2: 1 means it has happened 1 time.

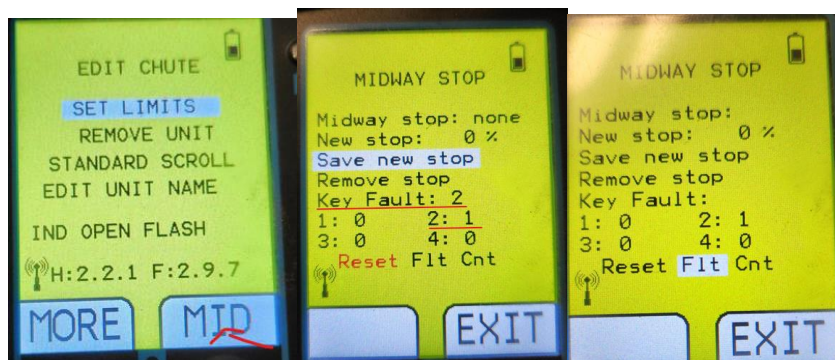

- o Can reset fault here and counter as well. Highlight and press Enter on FIt to reset the fault, Cnt to rest the counter.

Firmware 2.9.4 & 2.9.5, power cycle of the chute will reset the fault as well as the remote but it will still show in the counter when looking on the remote.

Firmware 2.9.6 and greater, power cycle will not clear the fault, either the remote or using the teach button clears it.